

UTP Industrial Field RJ45 Instruction TIA568A - 6502847

<p>1</p> <p>For AWG 26 (OD 5mm-6mm)</p> <p>(option)</p> <p>Suited for AWG 22-26</p>	<p>2</p> <p>Step1 AWG 26 (if necessary)</p> <p>Step2</p> <p>min. 25mm Stripping length</p>	<p>3</p> <p>T568A</p> <table border="1"> <tr> <td>1 GN/WH</td> <td>2 GN</td> <td>7 BR/WH</td> <td>8 BR</td> </tr> <tr> <td>3 OR/WH</td> <td>6 OR</td> <td>4 BL/WH</td> <td>5 BL</td> </tr> </table> <p>T568A</p>	1 GN/WH	2 GN	7 BR/WH	8 BR	3 OR/WH	6 OR	4 BL/WH	5 BL	<p>4</p>	<p>5</p>
1 GN/WH	2 GN	7 BR/WH	8 BR									
3 OR/WH	6 OR	4 BL/WH	5 BL									
<p>6</p> <p>click</p>	<p>7</p> <p>Remove the protective cover</p>	<p>8</p> <p>Lock</p> <p>Slide cable forward until snap-in</p>	<p>9</p> <p>1. Press SR to Lock 2. Tighten cable gland until stop</p> <p>Lock</p>	<p>10</p> <p>Complete termination</p>								

For retermination: Dismounting

<p>1</p> <p>Unlock</p>	<p>Face the latch downward</p> <p>Unlock</p>	<p>2</p> <p>Unlock</p>	<p>Unlock</p>	<p>3</p> <p>Unlock</p>
-------------------------------	--	-------------------------------	---------------	-------------------------------

